

HOLSAG CANADA

Seating Manufacturer

Specifications: Bulldog Backless Barstool

Description: The simple styling of the Backless Barstool provides comfortable seating while tucking neatly under bar areas. The side rails are extra thick to support the weight of people climbing up and leaning onto the barstool next to them. Upholstered seats as well as solid wood seats are available. The wood seats are sculpted at the factory to ensure a comfortable sitting position.

Dimensions: Barstool

Overall Height	30.00"	76.20 cm
Overall Depth	15.75"	40.01 cm
Seat Height	30.00"	76.20 cm
Seat Depth	15.75"	40.01 cm
Seat Width	16.00"	40.65 cm
Barstool Weight	16 lbs	7.3 kg
Carton Weight		
with 1 stool	26 lbs	11.8 kg
Carton Size		
	17.5" x 17.5" x 33"	
	44.5 cm x 44.5 cm x 84 cm	

The Backless barstool is non-stacking.

Fabric for upholstered seats:
COM (Customer's Own Material)
fabric required:
.35 yd (.33 m)

Note: This is the estimated amount based on 54" (137 cm) wide material. The actual amount may vary depending on special pattern matching and the width of the material.

Cushion Foam: High density on seat

Wood:

Species: 100% Solid European Beech Hardwood

Construction:

Joints: Mortise and tenon.

Glued with high solids glue and reinforced with 18 gauge nails, corner blocks and low root woodscrews.


Stain Colors:

A wide range of standard stain colors is available as well as custom color matching. (A surcharge will apply to custom colors.)

Standard Barstool Kick plates are brass. Chrome or black kick plates are available upon request at the same price.

9-Step Finishing Process:

1. The bare wood of the assembled chair is thoroughly sanded using 100 grit paper.
2. One coat of stain is sprayed onto the entire chair – including the underside of the seat.
3. The stain is handwiped to ensure an even color and maximum penetration into the wood.
4. The chair is inspected and any necessary adjustments made.
5. One coat of a catalyzed sealer is sprayed onto all wood parts to completely seal the wood – including the underside of the seat.
6. Once dry, the sealer is sanded using 280 grit paper.
7. A final sanding is done using Scotch Brite pads to remove any sanding marks.
8. A catalyzed lacquer is sprayed on. This lacquer is very durable and will stand up in a commercial environment.
9. A final inspection is performed prior to packaging to ensure a high level of quality control.

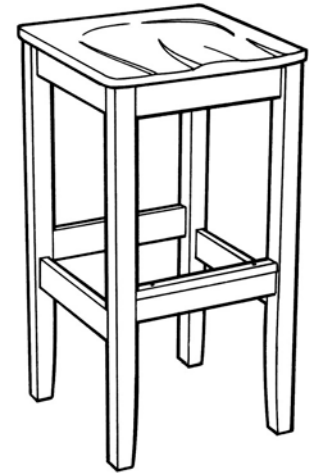

Note: Specifications are subject to change without notice.



Holsag Canada

164 Needham Street
Lindsay, Ontario Canada
K9V 5R7
(705) 878-1970
(888) 745-0721 (U.S. & Canada)
Fax: (705) 878-1864

www.holsag.com